




### **Safety Precautions**

The Benchmaster Ground Hunting & Shooting Chair is built to withstand years of use with minimal care. There is a recommended weight restriction of 225 pounds with legs fully extended and 300 pounds when the chair is resting on the ground with the legs removed. The chair is designed so it can be used on uneven terrain by adjusting each leg separately to achieve a balanced platform. The maximum recommended slope for a stable platform is five degrees. Beyond this slope the platform could become unstable even if the legs are properly adjusted. Make sure to position the legs prior to shooting so one (1) leg is directly behind your direction of fire. This will increase the stability of the chair during recoil. Do not rock back and forth or lean back on the chair because it may tip over. The main use of the Benchmaster Ground Hunting & Shooting Chair is for hunting and shooting. Precaution is essential anytime firearms are present. Always have your firearm unloaded when transporting your chair. Be aware a rifle can slip off the arm rests and accidentally discharge. Always keep your gun safety ON until you are ready to fire.

### **Product At A Glance**

The Benchmaster Ground Hunting & Shooting Chair is shipped disassembled. Included in the box:

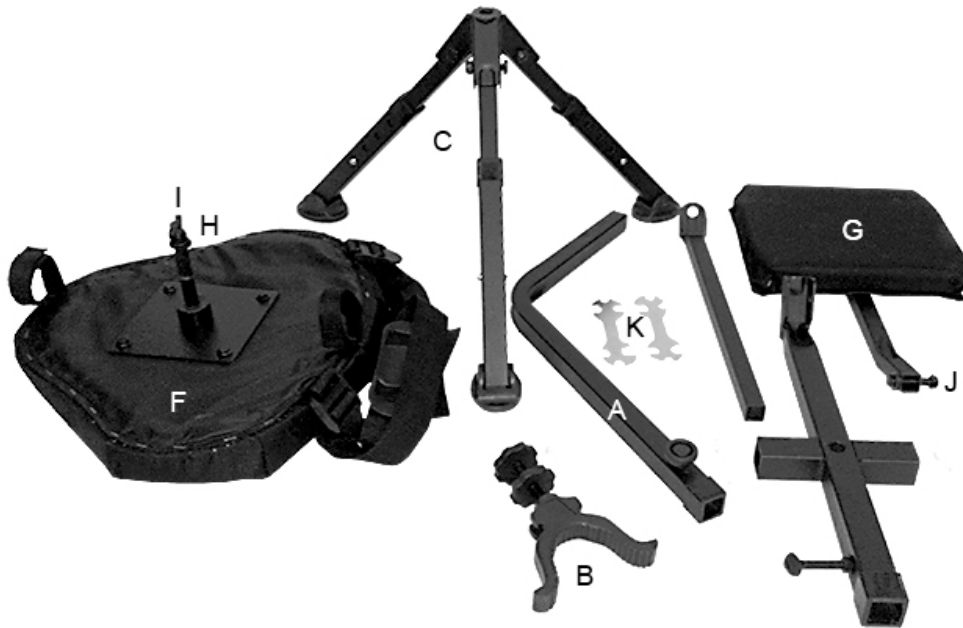

(Item A) One (1) detachable extendable shooting rest arm  
(Item B) One (1) shooting "Y" shaped yolk or rest  
(Item C) Three (3) adjustable legs  
(Item D) Round washer  
(Item E) Spacer/ Bushing  
Instructions

(Item F) Chair Seat  
(Item G) Chair Back  
(Item H) Lock washer  
(Item I) Wing nut  
(Item J) 2" Bolt  
(Item K) Wrenches

### **Assembly**

**Legs & Back:** To Attach the Seat Back insert the Chair Back Post into the Chair Back Holder (part of the Seat Frame). Insert the 2" Bolt through the Holder, Washer #1, Post, Washer #2, Holder and tighten Lock Nut. To attach the Legs, with the threaded post extending from the Chair Seat, slip on the Spacer, the Leg Assembly, Round Washer then the Lock Washer then the Wing Nut and tighten.

The Benchmaster Ground Hunting & Shooting Chair can be used with or without the legs (on soft ground by pushing the

Post into the ground). To adjust the legs, press the retractable pins in and slide the leg until the retractable pins protrude from the holes.

**Gun Rest:** The gun rest arm contains an extension arm for adjustability. Loosen the adjustment knob on the underside of seat and slide the gun rest arm into the receiving slot. Tighten the Knob. The gun rest can be raised or lowered and held in place using the adjustment knob. Add the "Y" yolk or rest to the top of the gun rest arm.

**Shoulder Carry:** The shoulder strap comes attached to the chair. The strap is adjustable and removeable.

**Uneven Terrain:** The three (3) legs are individually adjustable. Each leg has five levels of extension. For safe use of the chair, no leg should be more than one level of adjustment higher or lower than the other legs. If the slope of the terrain requires more than one adjustment level difference it may be too uneven for safe use of the chair. The chair may become unstable and tip over.

## **Warranty**

Limited Three (3) Year Warranty

Coverage: Altus Brands, LLC warrants this product against defects in materials and workmanship under normal use for 3 years from the date of purchase. Altus Brands LLC, at its option, will at no charge repair, replace or refund the purchase price of any products that do not conform to this warranty. This warranty is valid only in the United States and Canada and extends to the first purchaser only and is not transferable.

Exclusions: This warranty does NOT cover fabric, defects or damage resulting from misuse, accident or neglect, improper operation or alteration, normal wear and tear, replacement of optional accessories or normal wear and tear, cosmetic or surface damage, or accessories on which serial numbers or date tags have been altered. DAMAGES OR DEFECTS RESULTING FROM SERVICE WORK PERFORMED BY SERVICE CENTERS NOT AUTHORIZED BY ALTUS BRANDS LLC. ARE NOT COVERED BY THIS WARRANTY. Obtaining Service: To obtain warranty service, call 1-800—891-3660 in the USA and Canada. After obtaining a RMA number from Altus Brands Customer Care, all products must be shipped to a ALTUS BRANDS, LLC. Service Center freight and insurance prepaid by the consumer, and include dated proof of purchase, description of problem, and the consumer's address and telephone number.

General Conditions: REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE GIVEN ONLY IF SPECIFICALLY REQUIRED BY APPLICABLE LAW. IN NO EVENT, SHALL Altus Brands, LLC. BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT, TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

## **Contact Us**

Call 1.800.891.3660 between 9 AM and 5 PM EST (excluding weekends and holidays) OR email [sales@altusbrands.com](mailto:sales@altusbrands.com).